

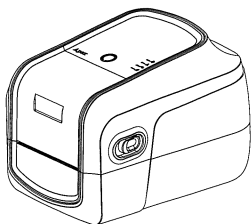


Installation Manual

For Thermal Transfer Barcode Printer
Apex Series

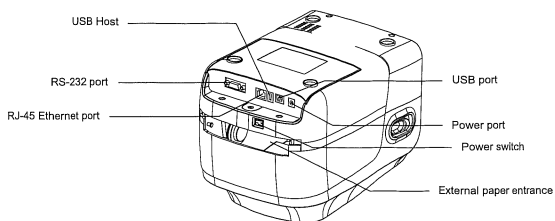


Please read this user guide before printer operation and keep this guide for reference.

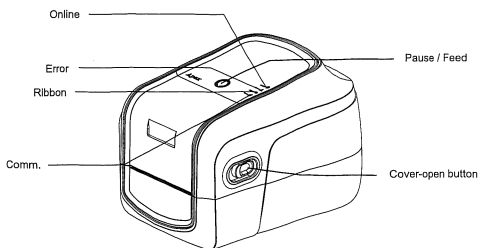


Note: The interface of printer showed in picture may have some differences from the model your purchased. As for the actual interface, please refer to the product specifications


Print media loading

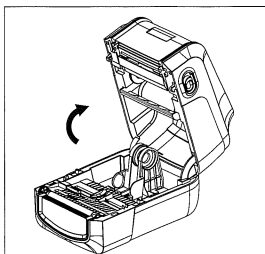

1. Press two buttons on printer two sides to lift and open the cover.

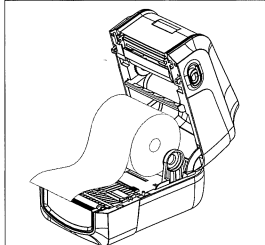


2. Load print media into the printer; adjust the paper guide to be same width of print media.

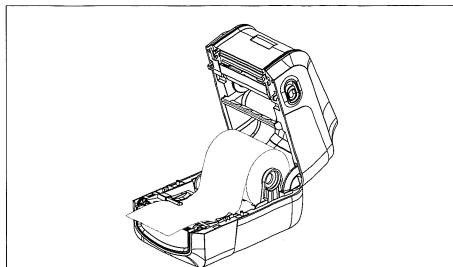


3. Pull out the print media till it pass gap sensor and cutter or peeler (cutter and peeler are optional), complete media loading

Ribbon loading

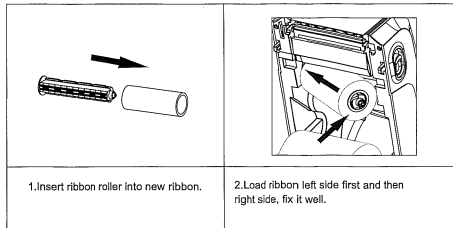


1. Insert ribbon roller into new ribbon.

2. Load ribbon left side first and then right side, fix it well.

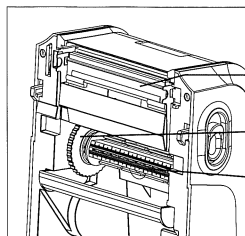


Print head
Ribbon holder
Ribbon supply shaft

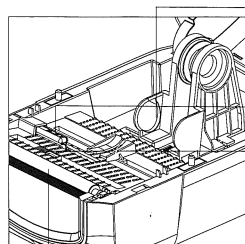

Paper guide
Gap sensor
Black mark sensor

Platen roller

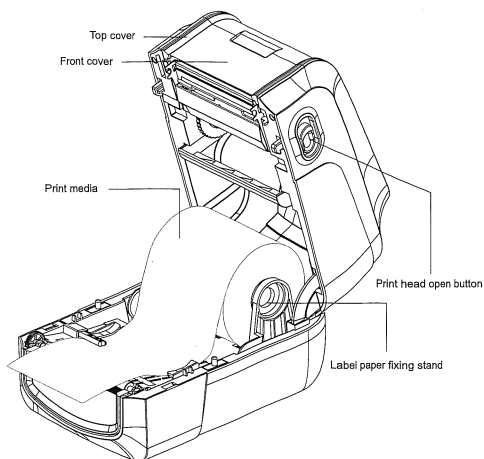


Top cover
Front cover
Print media
Print head open button
Label paper fixing stand


*If you need more information about the product, please refer to the User's Manual in CD.
*The printer specification, accessory, spare parts and program are subject to change without prior notice.

3.Insert ribbon roller into the empty roll for ribbon collecting after printed	4.Open the front cover	5.Load the empty roll left side first, then right side.
6.Pull out ribbon and stick into the empty roll. Make sure ribbon is flat and smooth when touch print head.	7.Close the front cover.	8.Carefully close top cover.

Ribbon and print media loading diagram

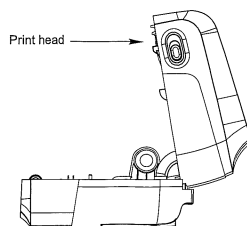

Print head

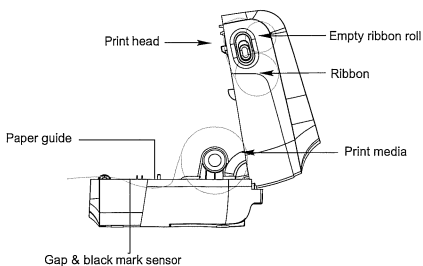

Print head
Empty ribbon roll
Ribbon
Print media
Paper guide
Gap & black mark sensor